

# INSTALLATION INSTRUCTION

**PART# VGSSB-0815-1978AL**










1. Remove the engine splash shield from underneath the vehicle.
2. Follow the installation process as depicted in the images.
3. After mounting the brackets, you may reattach the engine splash shield with cutouts for the bracket areas.


**Fits: 2018+ Volkswagen Atlas**


1. Please read this installation instruction before installing this part.  
When install it, please pay attention to protecting your vehicles.
2. When you use it, please check this parts at a fix time-lapse, such as one month or two month.

Install Time : 30 – 60 Minutes  
(Professional Installation)  
Install Note :

**PARTS LIST**

No	Name	Photo	Qty	Remarks	No	Name	Photo	Qty	Remarks
A	Step Board		2	lateral symmetry	F	T type screw2		4	M10x35 (34*15*T3)
B	front mount bracket		2	lateral symmetry	G	Flat washer		12	M10 (Φ10*Φ25*2)
C	middle mount bracket1		2	lateral symmetry	H	Lock washer		12	M10
D	back mount bracket		2	lateral symmetry	I	Hex Nut		12	M10
E	T type screw1		8	M10x40 (62*15*T4.5)	J				

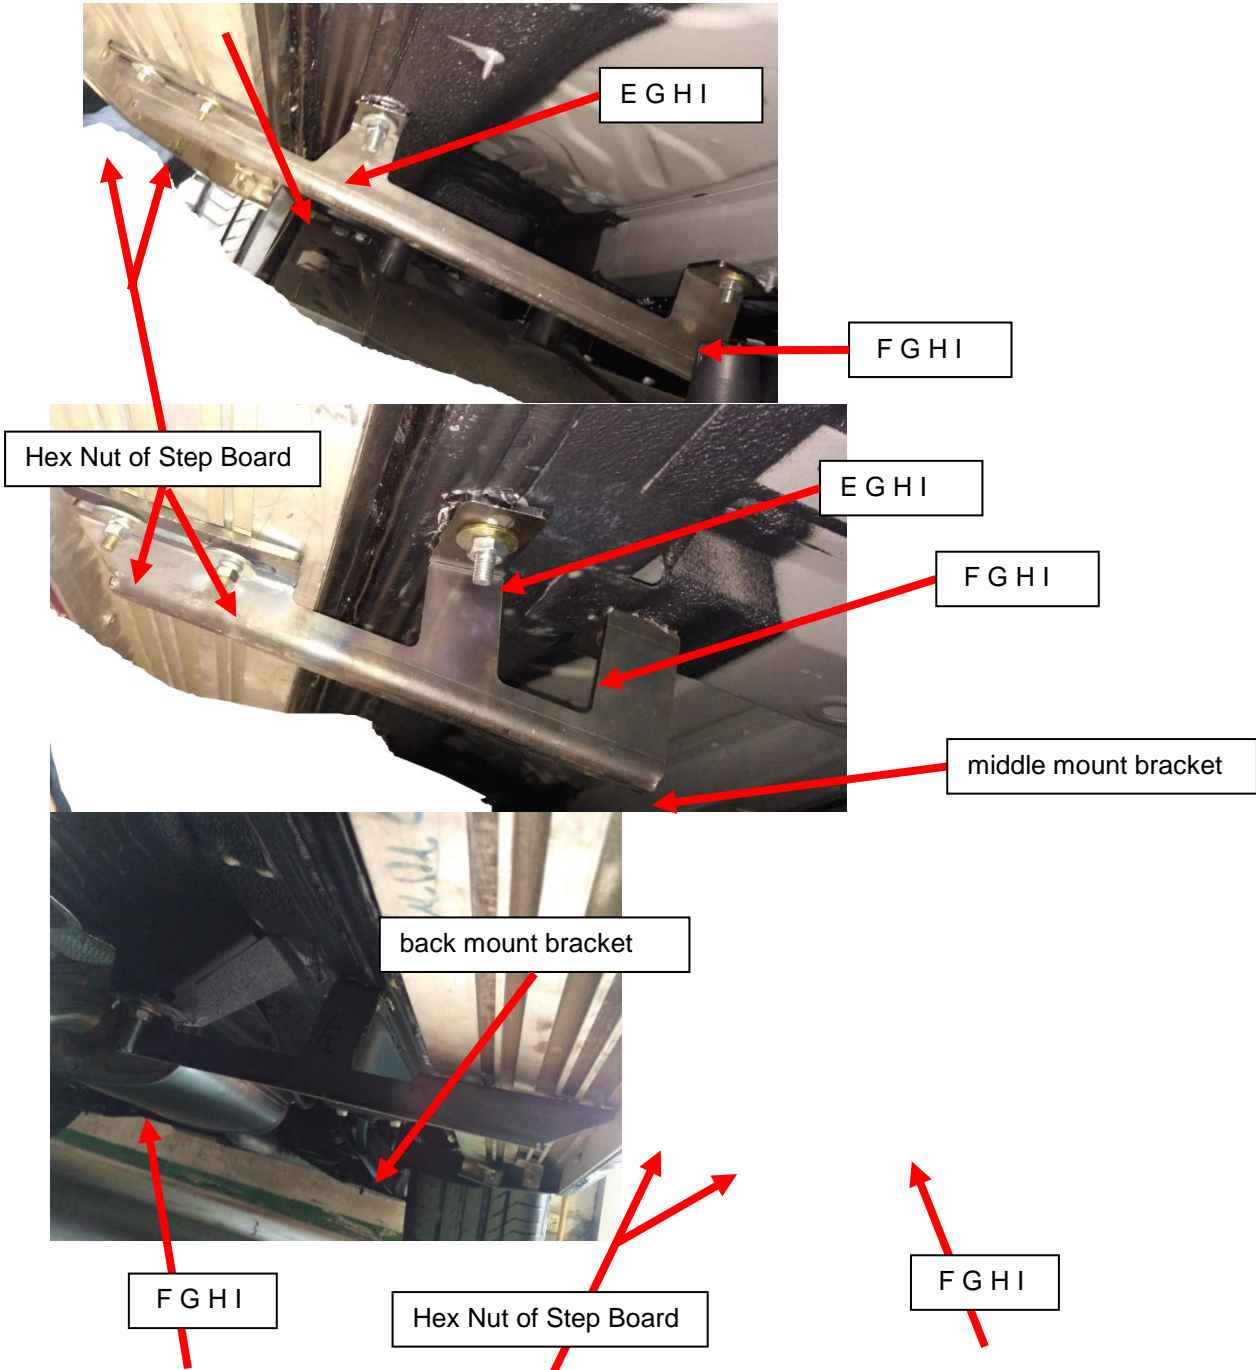

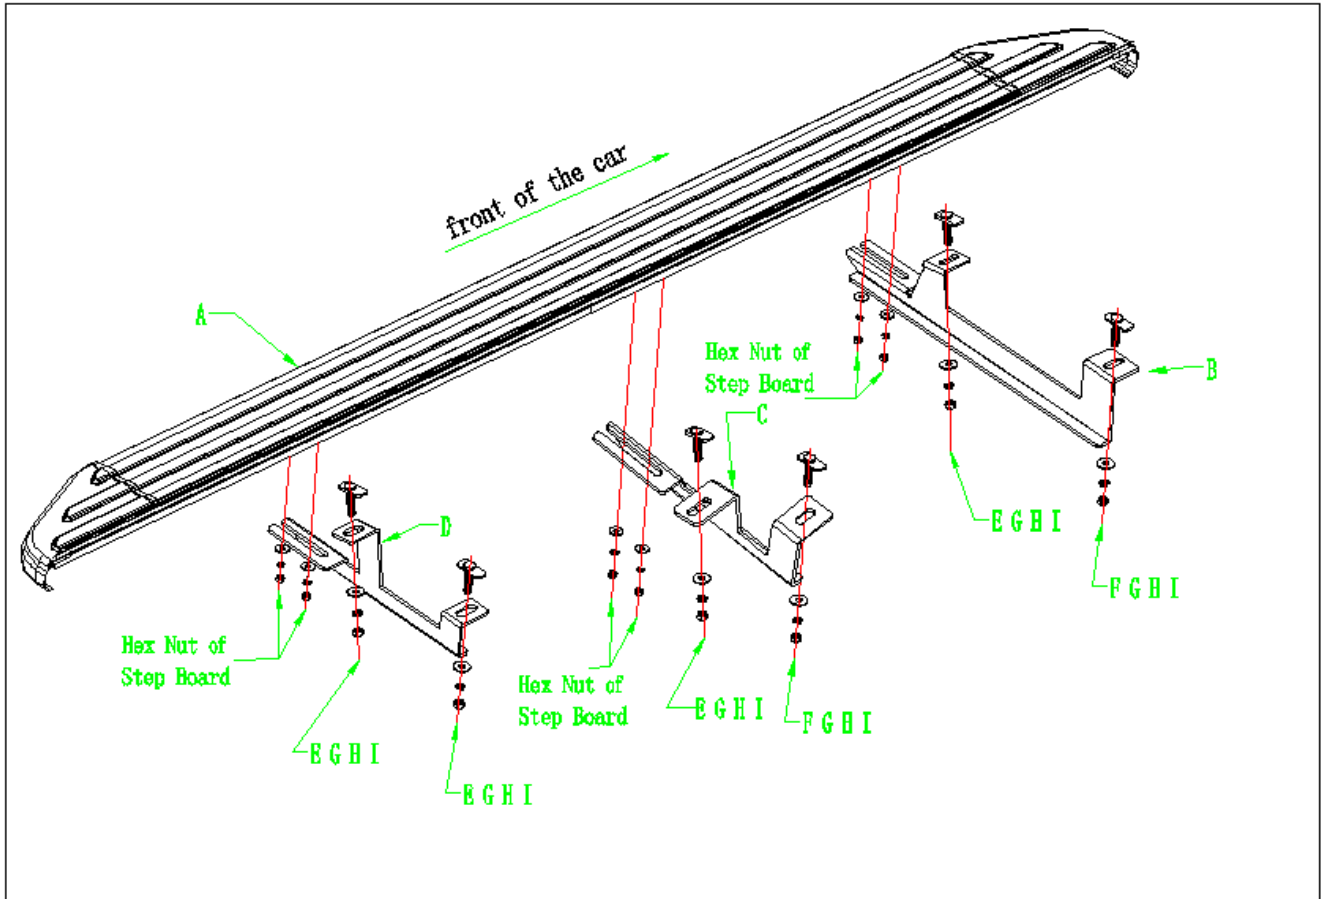

**INSTALLATION STEPS:**

- STEP 1. Check the parts in the box carefully if match above list .
- STEP 2. Pls prepare the tools for installation,  
follow as: 10-12、14-17wrench.
- STEP 3. Put the mount brackets B C D on the girder of the car with bolts E F G H I , then tighten it.
- STEP 4. Put the Step Board A on the mount brackets with M6 bolts of the Step Board , then tighten it.