

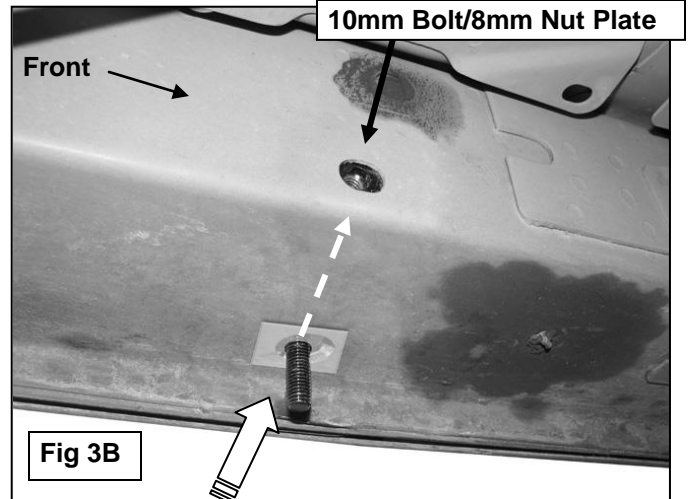


VGSSB-0815-1261AL
07-13 CHEVY TRAVERSE/GMC ACADIA/07-10 SATURN OUTLOOK/07-09 BUICK ENCLAVE
(EXCL. ACADIA DENALI, 2010-13 BUICK ENCLAVE)
Driver Side Installation Pictured

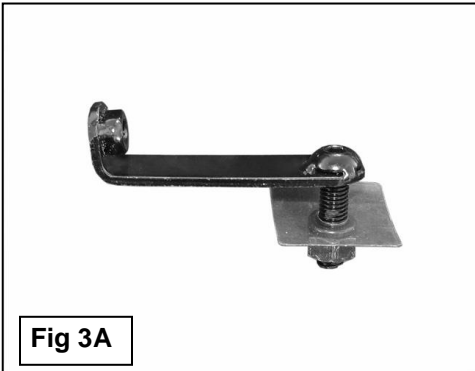


10mm Flat Washer
10mm Lock Washer
10mm Hex Nut

8mm x 30mm Hex Bolt
8mm Lock Washer
8mm Flat Washer

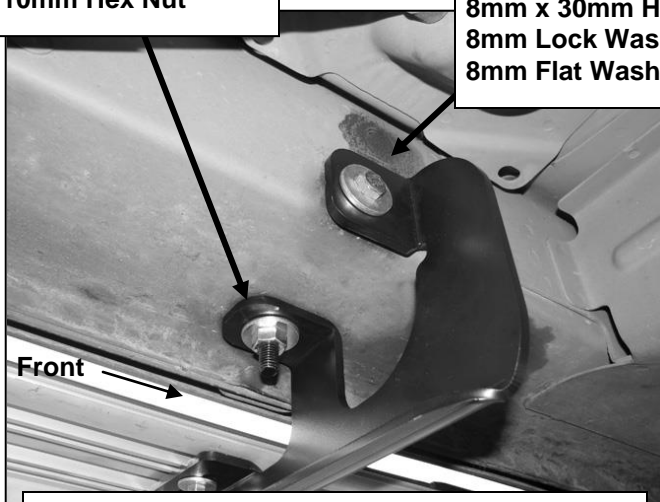


(Fig 4) Driver front Bracket installation pictured

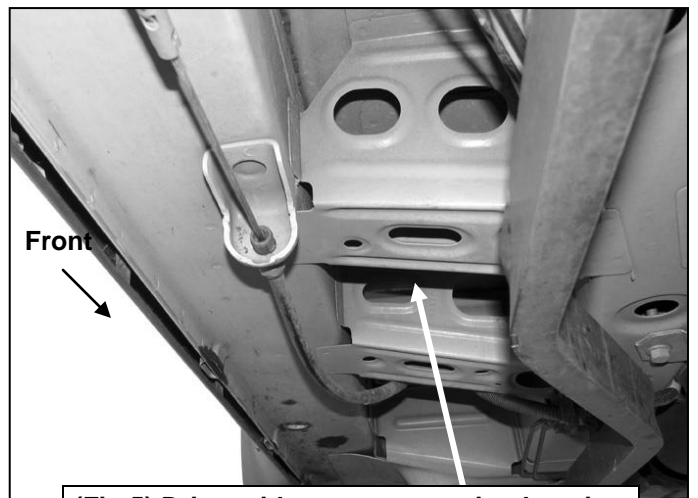



(Fig 5) Driver side center mounting location

07-13 CHEVY TRAVERSE/GMC ACADIA/07-10 SATURN OUTLOOK/07-09 BUICK ENCLAVE
(EXCL. ACADIA DENALI, 2010-13 BUICK ENCLAVE)

Driver Side Installation Pictured


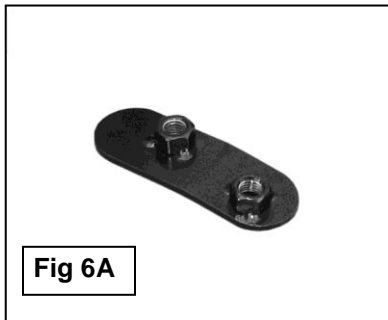


Line up offset hole in Nut Plate with single small hole

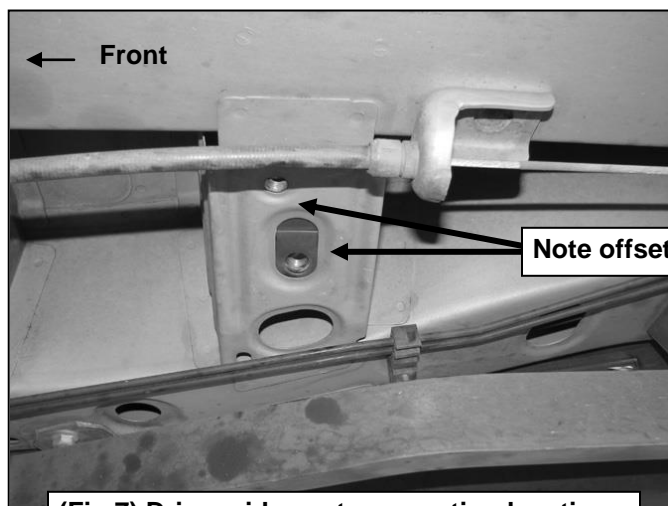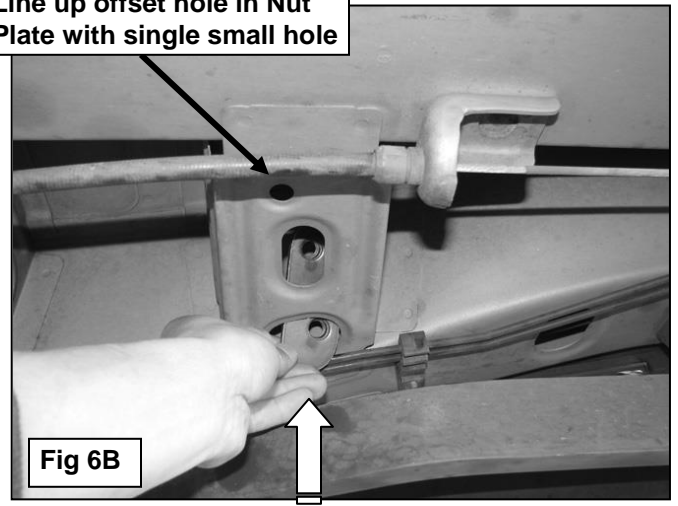

(Fig 7) Driver side center mounting location

- (2) 10mm x 35mm Hex Bolts
- (2) 10mm Lock Washers
- (2) 10mm Flat Washers

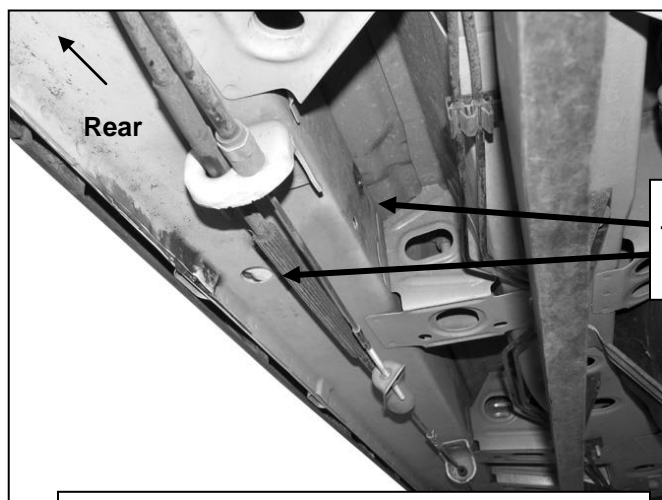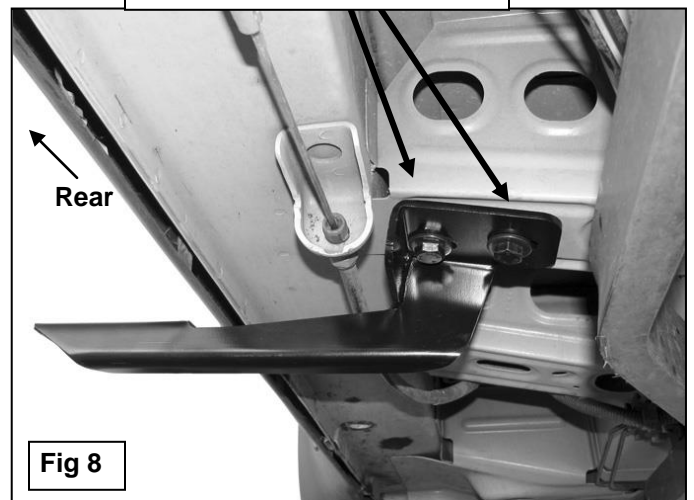

(Fig 9) Driver side rear mounting location


Use these (2) holes. Remove foam as necessary. Insert 10mm Bolt/8mm Nut Plate

07-13 CHEVY TRAVERSE/GMC ACADIA/07-10 SATURN OUTLOOK/07-09 BUICK ENCLAVE
(EXCL. ACADIA DENALI, 2010-13 BUICK ENCLAVE)


Driver Side Installation Pictured

10mm Flat Washer
10mm Lock Washer
10mm Hex Nut

8mm x 30mm Hex Bolt
8mm Lock Washer
8mm Flat Washer

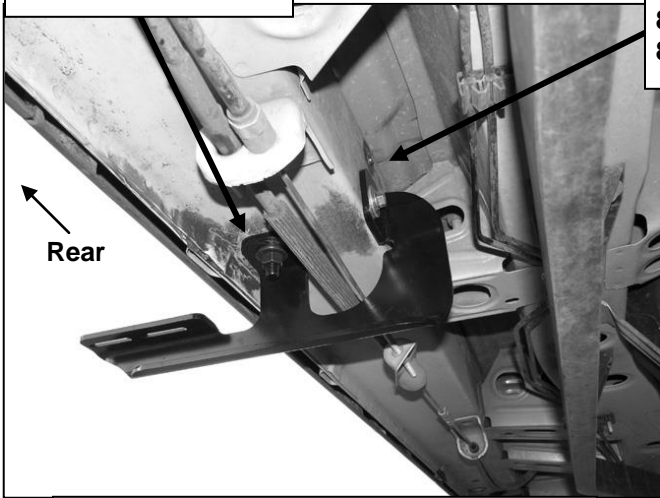


(Fig 10) Driver side rear Bracket pictured

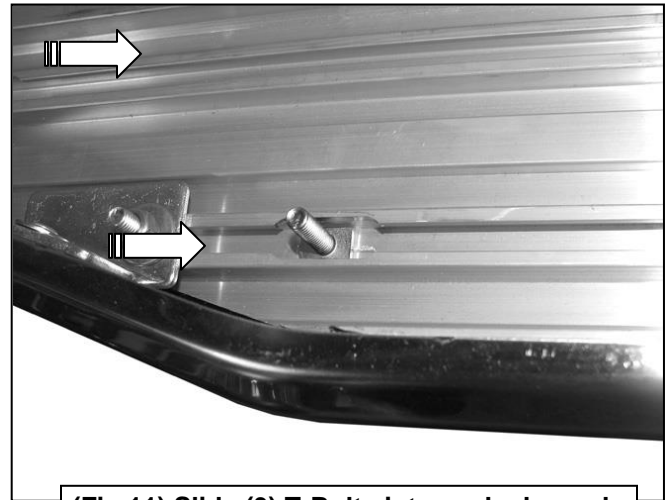

(Fig 11) Slide (3) T-Bolts into each channel

(2) 6mm Flat Washers
(2) 6mm Lock Washers
(2) 6mm Hex Nuts

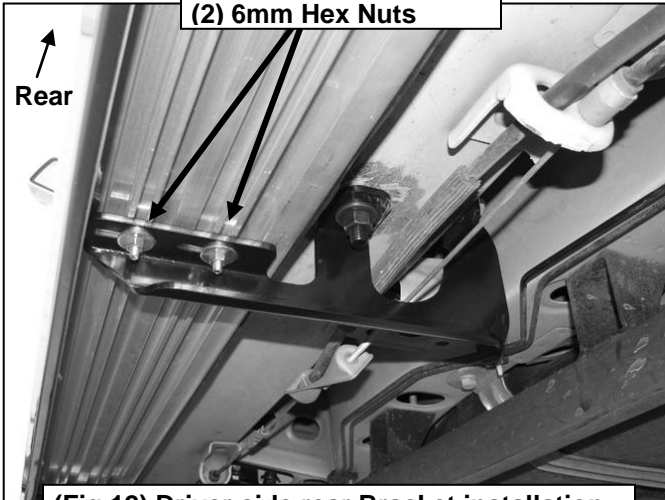

(Fig 12) Driver side rear Bracket installation



Installation Complete